


AQ DRAFTING SERVICE


DOOR HANDING GUIDE

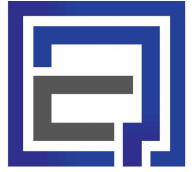


This guide is intended to help you understand the entrance door terminology adopted by AQ Drafting Service.

VIEW OF THE ELEVATION FROM THE EXTERIOR


Single Door Terminology

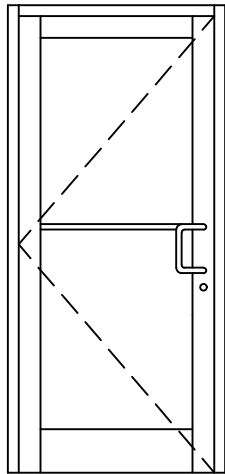


EXTERIOR

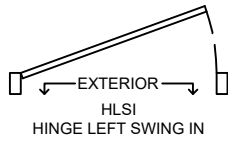


EXTERIOR
HLSI
HINGE LEFT SWING IN

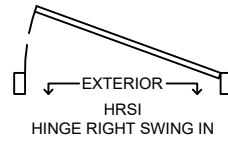


EXTERIOR
HRSI
HINGE RIGHT SWING IN

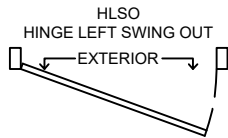


HLSO
HINGE LEFT SWING OUT
EXTERIOR

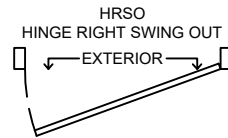


HRSO
HINGE RIGHT SWING OUT
EXTERIOR

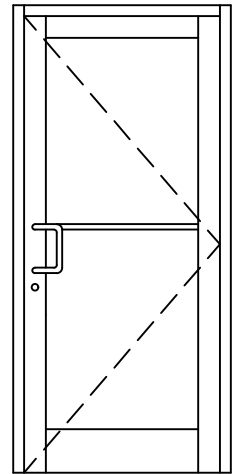


DOOR PAIR TERMINOLOGY

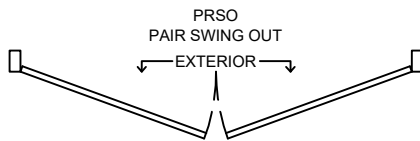

PRSO
PAIR SWING OUT
EXTERIOR

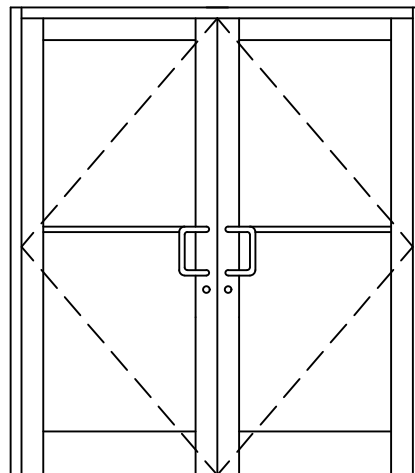

EXTERIOR



EXTERIOR
PRSI
PAIR SWING IN

Shop drawings for all architectural window / door commercial projects.

(919) 980-5618 Phone
(919) 980-5619 Fax

3821 Hwy 49
PO Box 250
Tennessee Ridge, TN 37178

info@aqdrafting.com
www.aqdrafting.com